


How to use your ECT Router Guide

Mortises, Door Locks and Other Recesses

Step 1

Measure your router base (if you don't know already).

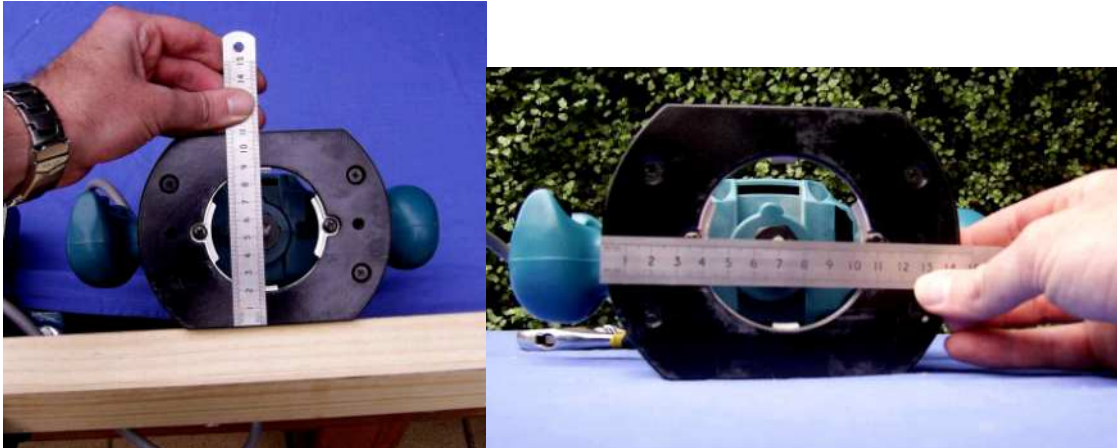

Note: You will need to know these dimensions to set your guides.

Step 2

1. *Ensure that your work piece is secure.*
2. *Decide what size recess you need and mark this on the work-piece.*



Step 3

1. Adjust left and right parallel guides as required. Your router base will use these guides to help control the direction of your cut.
2. Adjust the pivot guide (pivot guide is the one with the 'ECT' logo).



3. Tighten the fasteners on the left and right guides, also both fasteners on the pivot guide.



Step 4

IMPORTANT: Make sure you have enough clamps so that your work piece and the ECT Router Guide are secure. You will need to use your own standard G-clamps in addition to the ECT clamp. The ECT clamp is **not** designed for high clamping force. This clamp is primarily to help locate the router guide on the work-piece.

You are now ready to set your router depth and make your cut.



Note: If your mortise or recess is wider than the width of your router cutting piece. Simply adjust the pivot guide as required, and then make a second cut. This will produce a wider recess.